

Roland	Model	Type	Compatible	Gain Setting*	Comments
	PD-105	Dual-zone mesh drum pad	Yes		
	PD-85	Dual-zone rubber pad	Yes	30	Set rim to switch
	PD-8	Dual zone Rubber drum pad	Yes	30	Set rim to switch
	PDX-6	Mesh head pad	Yes	30	Head and rim piezo
	PDX-8	Mesh head pad	Yes	30	Head and rim piezo
	TD-4 Kit HH pedal	Hi-hat pedal	Yes	20	Must be calibrated
	HD-1/TD-4 Kit	Mesh head snare pad	Yes	30 C / 45 R	Piezo / Piezo settings
	KD-8	Kick pad	Yes	30	
	KD-8	Kick pad	Yes	40	
	FD-8	Hi-hat pedal	Yes	20	Must be calibrated
	CY-8	Single-zone cymbal pad	Yes	20	
	CY-12R	Triple-zone cymbal pad	Yes	20	Set bell to switch
	CY-14C	Triple-zone cymbal pad	Semi	30	Ride 1: Single-zone bow, no choke
					Ride 2: Single-zone bow, no bell, choke ok
					Crash: Single-zone bow, choke ok
	CY-15R	Triple-zone cymbal pad	Yes	30	Set bell to switch
	CY-12C	Triple-zone cymbal pad	Yes	30	Ride input 1
	VH-11	Hi-hat pad and control pedal	Yes	20	Single zone, unable to trigger heel splash

Yamaha	Model	Type	Compatible	Gain Setting*	Comments
	TP65	Single-zone rubber drum pad	Yes	40	
	TP65S	Dual-zone rubber drum pad	Yes	35 C	Set rim to switch
	TP100	Dual-zone rubber drum pad	Yes	40	Set rim to switch
	TP120SD	Triple-zone snare pad	Yes	30	Dual zone only, set rim to switch
	PCY65	Single-zone cymbal pad	Yes	30	
	PCY135	Triple-zone cymbal pad	Semi	20	Ride 1: bell only
					Ride 2: Edge plays on bell, bell actuates choke, bow o
					Single zone, no choke
	PCY155	Cymbal pad	Semi	45	Ride input 1: bell/bow, set bell to switch, no choke
					Ride input 2: Bell on bow, no choke
	HH65	Hi-hat pedal	No		
	KP65	Kick pad	Yes	20	Works only on Through input

Pintech	Model	Type	Compatible	Gain Setting*	Comments
	8"	Single-zone mesh pad	Yes	10	with volume knob at max
	10"	Dual-zone mesh pad	Yes	15 C / 30 R	Set edge to piezo
	PC Series cymbal	Single zone with choke	Yes	15	Choke for Crash input
	Visu-Lite	Triple-zone cymbal	Yes	30	Set bell to switch

Simmons	Model	Type	Compatible	Gain Setting*	Comments
	9" drum pad	Single-zone rubber pad	Yes	30	
	11" drum pad	Dual-zone rubber pad	Yes	30	Piezo / Pieze settings
	14" cymbal pad	Triple-zone rubber pad	Yes	30	Set bell to switch

Traps	Model	Type	Compatible	Gain Setting*	Comments
	14" cymbal pad	Single-zone rubber pad	Yes	15	
	14" drum pad	Single-zone rubber pad	Yes	30	
	8" kick pad	Single-zone rubber pad	Yes	30	

* recommended gain for widest dynamic range