

# Voice List

## No. NAME

### KICK

001	Standard Kick 1
002	Standard Kick 2
003	Classic Kick 1
004	Classic Kick 2
005	Rock Kick
006	Camco Kick 1
007	Camco Kick 2
008	Acoustic Kick 1
009	Acoustic Kick 2
010	Acoustic Kick 3
011	Acoustic Kick 4
012	TR606 Kick

### SNARE

013	Standard Snare
014	Standard Snare Rim
015	Funk Snare
016	Funk Snare Rim
017	Funk Stick
018	Classic Snare
019	Classic Snare Rim
020	Rock Snare
021	Rock Snare Rim
022	Brush Snare
023	Brush Snare Rim
024	Camco Snare
025	Camco Snare rim
026	TR606 Snare

### TOM

027	Classic Tom 1
028	Classic Tom 2
029	Classic Tom 3
030	Classic Tom 4
031	Classic Tom 5
032	Classic Tom 6
033	Rock Tom 1
034	Rock Tom 2
035	Rock Tom 3

## No. NAME

036	Rock Tom 4
037	Rock Tom 5
038	Rock Tom 6
039	Brush Tom 1
040	Brush Tom 2
041	Brush Tom 3
042	Brush Tom 4
043	Brush Tom 5
044	Brush Tom 6
045	Camco Tom 1
046	Camco Tom 2
047	Camco Tom 3
048	Camco Tom 4
049	Camco Tom 5
050	Camco Tom 6
051	TR606 Tom 1
052	TR606 Tom 2
053	TR606 Tom 3
054	TR606 Tom 4
055	TR606 Tom 5
056	TR606 Tom 6

### RIDE

057	Classic Ride
058	Rock Ride
059	Brush Ride
060	TR606 Ride

### CRASH

061	Classic Crash
062	Rock Crash 1
063	Rock Crash 2
064	Brush Crash
065	China Crash
066	TR606 Crash

### HIHAT

067	Classic Open Hi hat
068	Rock Open Hi hat
069	TR606 Open Hi hat

## No. NAME

### Percussion

070	Tabla 001
071	Tabla 002
372	Tabla 003
073	Tabla 004
074	Tabla 005
075	Tabla 006
076	Bongo High
077	Bongo Low
078	Conga 1
079	Conga 2
080	Conga 3
081	Timbale High
082	Timbale Low
083	Agogo High
084	Agogo Low
085	Cowbell 1
086	Cowbell 2
087	Cowbell 3
088	Cowbell 4
089	Cowbell 5
090	Cowbell 6
091	Cowbell 7
092	Cowbell 8
093	Cowbell 9
094	Cowbell 10
095	Hi Hat 001
096	Hi Hat 002
097	Hi Hat 003
098	Hi Hat 004
099	Hi Hat 005
100	Hi Hat 006
101	Hi Hat 007
102	Hi Hat 008
103	Hi Hat 009
104	Dj001
105	Dj002
106	Dj003
107	Dj004
108	Dj005

## Preset KIT and Default user KIT

### No. KIT

001	Standard
002	Rock
003	Pop
004	Funk
005	Brush
006	Jazz
007	Table
008	Latin

### No. KIT

009	TR606
010	DJ
011	User kit1 (Standard)
012	User kit2 (Rock)
013	User kit3 (Pop)
014	User kit4 (Funk)
015	User kit5 (Brush)

### Note:

Number 001~010 are preset kits, number 011~015 are users kits.

# Pattern List

No.	PATTERN
-----	---------

001	Fusion1
002	Latin Jazz1
003	Funk1
004	Latin Pop1
005	60's Rock
006	Big Band1
007	Drum N'Bass
008	Ballad
009	Swing
010	Pop1
011	Funk2
012	Latin Jazz2
013	Pop Funk1
014	Latin Rock1
015	Big Band2
016	Pop Ballad
017	Pop Funk2
018	3/4Jazz
019	Pop Bossa
020	Samba1
021	6/8Ballad

No.	PATTERN
-----	---------

022	Fusion2
023	Jazz1
024	Guitar Bossa
025	Break Beat
026	World1
027	Funk3
028	Latin Jazz3
029	Latin Pop2
030	Reggae1
031	World2
032	Latin
033	Bossa
034	Samba2
035	3/4Pop
036	Pop2
037	Jazz2
038	Reggae2
039	Reggae3
040	Latin Rock2
041	User Pattern

# Percussion Set List

Standard(PC0)	Rock(PC1)	Pop(PC2)	Funk(PC3)	Brush(PC4)	Jazz(PC5)	606(PC6)	DJ(PC7)
27 High Q	<-	<-	<-	<-	<-	<-	<-
28 Slap	<-	<-	<-	<-	<-	<-	<-
29 Scratch Push	<-	<-	<-	<-	<-	<-	<-
30 Scratch Pull	<-	<-	<-	<-	<-	<-	<-
31 Sticks	<-	<-	<-	<-	<-	<-	<-
32 Square Click	<-	<-	<-	<-	<-	<-	<-
33 Metronome Click	<-	<-	<-	<-	<-	<-	<-
34 Metronome Bell	<-	<-	<-	<-	<-	<-	<-
35 STD Kick 2	<-	<-	<-	<-	<-	<-	<-
36 STD Kick 2	Rock Kick	Pop Kick	Funk Kick	Brush Kick	Jazz Kick	TR606 Kick	<-
37 Side Stick	<-	<-	<-	<-	<-	<-	<-
38 STD Snare	Rock Snare	Pop Snare Drum	Funk Snare	Brush Snare	Jazz Snare	TR606 Snare	<-
39 Hand Clap	<-	<-	<-	<-	<-	<-	<-
40 STD Snare Rim	Rock Snare Rim	Pop Snare Rim	Funk Snare Rim	Brush Snare Rim	Jazz Snare Rim	TR606 Snare Rim	<-
41 STD Low Tom 2	Rock Low Tom 2	Pop Low Tom 2	Funk Low Tom 1	Brush Low Tom2	Jazz Low Tom 2	TR606 Low Tom 2	<-
42 Closed Hi-Hat	<-	<-	<-	<-	<-	TR606 Closed Hi-Hat	<-
43 STD Low Tom 1	Rock Low Tom 1	Pop Low Tom 1	Funk Low Tom 1	Brush Low Tom 1	Jazz low tom 1	TR606 Low Tom1	<-
44 Pedal Hi-Hat	<-	<-	<-	<-	<-	TR606 Pedal Hi-Hat	<-
45 STD Mid Tom 2	Rock Mid Tom 2	Pop Mid Tom 2	Funk Mid Tom 2	Brush Mid Tom 2	Jazz Mid Tom 2	TR606 Mid Tom 2	Dj Mix 5
46 Open Hi-Hat	<-	<-	<-	<-	<-	TR606 Open Hi-Hat	<-
47 STD Mid Tom 1	Rock Mid Tom 1	Pop Mid Tom 1	Funk Mid Tom 1	Brush Mid Tom 1	Jazz Mid Tom 1	TR606 Mid Tom 1	Dj Mix 4
48 STD Hi Tom 2	Rock Hi Tom 2	Pop Hi Tom 2	Funk Hi Tom 2	Brush Hi Tom 2	Jazz Hi Tom 2	TR606 Hi Tom 2	Dj Mix 3
49 Crash Cymbal 1	<-	<-	<-	<-	<-	tr606 crash cymbal1	Dj Mix 2
50 STD Hi Tom 1	Rock Hi Tom 1	Pop Hi Tom 1	Funk Hi Tom 1	Brush Hi Tom 1	Jazz Hi Tom 1	TR606 Hi Tom 1	<-
51 Standard Ride	Rock Ride	<-	<-	Brush Ride	<-	<-	Dj Mix 1
52 Chinese Cymbal	<-	<-	<-	<-	<-	<-	<-
53 Ride Bell	<-	<-	<-	<-	<-	<-	<-
54 Tambourine	<-	<-	<-	<-	<-	<-	<-
55 Splash Cymbal	<-	<-	<-	<-	<-	<-	<-
56 Cowbell	<-	<-	<-	<-	<-	<-	<-
57 Crash Cymbal 2	<-	<-	<-	<-	<-	<-	<-
58 Vibraslap	<-	<-	<-	<-	<-	<-	<-
59 Ride Cymbal 2	<-	<-	<-	<-	<-	<-	<-
60 Hi Bongo	<-	<-	<-	<-	<-	<-	<-
61 Low Bongo	<-	<-	<-	<-	<-	<-	<-
62 Mute Hi Conga	<-	<-	<-	<-	<-	<-	<-
63 Open Hi Conga	<-	<-	<-	<-	<-	<-	<-
64 Low Conga	<-	<-	<-	<-	<-	<-	<-
65 High Timbale	<-	<-	<-	<-	<-	<-	<-
66 Low Timbale	<-	<-	<-	<-	<-	<-	<-
67 High Agogo	<-	<-	<-	<-	<-	<-	<-
68 Low Agogo	<-	<-	<-	<-	<-	<-	<-
69 Cabasa	<-	<-	<-	<-	<-	<-	<-
70 Maracas	<-	<-	<-	<-	<-	<-	<-
71 Short Whistle	<-	<-	<-	<-	<-	<-	<-
72 Long Whistle	<-	<-	<-	<-	<-	<-	<-
73 Short Guiro	<-	<-	<-	<-	<-	<-	<-
74 Long Guiro	<-	<-	<-	<-	<-	<-	<-
75 Claves	<-	<-	<-	<-	<-	<-	<-
76 Hi Wood Block	<-	<-	<-	<-	<-	<-	<-
77 Low Wood Block	<-	<-	<-	<-	<-	<-	<-
78 Mute Cuica	<-	<-	<-	<-	<-	<-	<-
79 Open Cuica	<-	<-	<-	<-	<-	<-	<-
80 Mute Triangle	<-	<-	<-	<-	<-	<-	<-
81 Open Triangle	<-	<-	<-	<-	<-	<-	<-
82 Shaker	<-	<-	<-	<-	<-	<-	<-
83 Jingle Bell	<-	<-	<-	<-	<-	<-	<-
84 Belltree	<-	<-	<-	<-	<-	<-	<-
85 Castanets	<-	<-	<-	<-	<-	<-	<-
86 Mute Surdo	<-	<-	<-	<-	<-	<-	<-
87 Open Surdo	<-	<-	<-	<-	<-	<-	<-

<-: Same as the left one.

# MIDI Implementation Chart

Function		Transmitted	Recognized	Remarks
Basic	Default	10 ch	1-16	
Channel	Changed	X	X	
Mode	Default	X	X	
	Messages	X	X	
	Altered	*****	*****	
Note		0 - 127	0 - 127	
Number:	True voice	*****	0 - 127	
Velocity	Note on	O 99H, V=1-127	O	
	Note off	O (99H, V=0)	O	
After	Key's	X	X	
Touch	Channel's	X	X	
Pitch	Bend	X	O	
Control	0	X	O	Bank Select
Change	1	X	O	Modulation
	5	X	O	Portamento Time
	6	X	O	Data Entry
	7	X	O	Volume
	10	X	O	Pan
	11	X	O	Expression
	64	X	O	Sustain Pedal
	65	X	O	Portamento ON/OFF
	66	X	O	Sostenuto Pedal
	67	X	O	Soft Pedal
	80	X	O	Reverb Program
	81	X	O	Chorus Program
	91	X	O	Reverb Level
	93	X	O	Chorus Level
	120	X	O	All Sound OFF
	121	X	O	Reset All Controller
	123	X	O	All Notes OFF
Program	Change	O	O	
System	Exclusive	X	O	
System	: Song Position	X	X	
Common	: Song Select	X	X	
	: Tune	X	X	
System	: Clock	X	X	
RealTime	: Commands	X	X	
Aux	: Local ON/OFF	X	X	
	: All Notes OFF	X	O	
Messages	: Active Sense	O	X	
	: Reset	X	X	

**Note 1:** Reverb program vv=00H to 07H (default 04H)

00H : Room1      01H : Room2  
 02H : Room3      03H : Hall1  
 04H : Hall2      05H : Plate  
 06H : Delay      07H : Pan delay

**Note2:** Chorus program vv=00H to 07H (default 02H)

00H : Chorus1      01H : Chorus2  
 02H : Chorus3      03H : Chorus4  
 04H : Feedback      05H : Flanger  
 06H : Short delay      07H : FB delay

**Note3:** Just respond 3 type of RPN 000~002.

O : YES      X : NO